

ZAGG®

flex®

Keyboard Instructions



See the important Health and Safety information on page 7 before using this product.

***WARRANTY REGISTRATION**

Your ZAGG Flex comes with a one-year manufacturer's warranty. In order to activate the warranty, you must register your Flex as well as keep your purchase receipt. If you purchased your ZAGG Flex from ZAGG.com, ZAGG has already registered it and has a copy of your proof of purchase.

NEED MORE HELP? PLEASE SEE OUR FAQ SECTION AT: www.ZAGG.com/faq

USING THE STAND

The cover of the Flex keyboard folds to form a triangular stand that holds most smartphones or tablets sized 10.5-inches or smaller at a convenient viewing angle.

DETACHING THE COVER FROM THE KEYBOARD

The Flex keyboard and cover are attached magnetically. To detach the cover from the keyboard, hold one of the top corners of the keyboard with one hand, and with the other hand on the corresponding top corner of the cover, pull directly up. This will disengage the magnets holding the keyboard and cover together.

POWERING ON AND OFF

The Flex keyboard can detect when the the cover is folded over it.

1. When the cover is folded over the keyboard, the keyboard turns itself off automatically.
2. When the cover is folded back away from the keyboard, it automatically turns itself on.

PAIRING YOUR FLEX KEYBOARD WITH YOUR DEVICE


Your Flex keyboard can pair with virtually any smartphone or tablet as well as your smart TV!

1. Ensure your device's Bluetooth® connection is on.
2. Press the **⌘** 1 or **⌘** 2 key on the Flex keyboard for three seconds. A blue LED light on the DELETE key will begin pulsing, indicating your Flex keyboard is in pairing mode.
3. Your device will display "ZAGG Flex" as an available pairing option. Select it and complete any other pairing steps based on your device.
4. To pair your Flex keyboard with another device repeat steps 2 and 3. To toggle between devices, simply press **⌘** 1 or **⌘** 2 .
5. Once paired, the LED light on the DELETE key will turn off. Once begun, if the Flex keyboard doesn't complete pairing after 60 seconds, it will abort the process. If this happens, repeat steps 2 and 3.

CHARGING

Your Flex keyboard features a powerful battery that lasts up to one year of normal use between charges.* It comes with a charging cable you can use to charge your keyboard quickly and conveniently. To charge your Flex keyboard, follow these steps:

1. Plug the micro USB connector into the charging port.
2. Plug the regular USB connector into any 5V USB outlet.
3. A red LED light on your DELETE key will light to indicate the Flex keyboard is charging. This LED will turn off when your keyboard is fully charged.

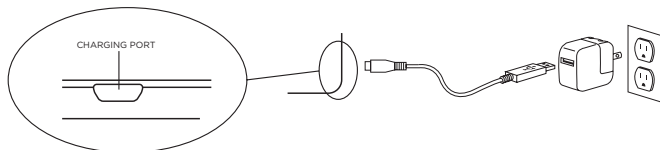

**Normal use is approximately one hour of use per day without the backlit feature. Using the backlit feature will impact battery life and require more frequent charging.*

BATTERY LIFE

To check your Flex keyboard's battery life, press fn + the battery key. The LED light on the DELETE key will flash one of the following three ways:



 














Three green flashes = 50% or more battery life

Three yellow flashes = 25-49% battery life

Three red flashes = less than 25% battery life

SPECIAL FUNCTION KEYS

Your Flex keyboard has been designed with the following special function keys to give you more control of your device:

-  **1 BLUETOOTH[®] 1** - Hold for three seconds to pair your Flex keyboard with your device. If paired with a second device press  **2** to instantly switch between devices.
-  **2 BLUETOOTH[®] 2** - Hold for three seconds to pair your Flex keyboard with your device. If paired with a second device press  **1** to instantly switch between devices.
-  **HOME** - Displays your device's home screen.
-  **LOCK** - Activates and deactivates your device's sleep mode.
-  **LAUNCHPAD SYMBOL** - Switches between your device's applications.
-  **KEYBOARD HIDE/SHOW** - Hides or shows your device's on-screen keyboard.
-  **PREVIOUS TRACK** - Skips to the previous track on your selected playlist.
-  **PLAY/PAUSE** - Starts or pauses your current playlist.
-  **NEXT TRACK** - Skips to the next track on your current playlist.
-  **MUTE** - Mutes your device's audio.
-  **VOLUME DOWN** - Decreases your device's volume.
-  **VOLUME UP** - Increases your device's volume.
-  **FN + BATTERY SYMBOL** - Indicates remaining battery life.
-  **FN + BACKLIGHT SYMBOL** - Activates your Flex's backlight feature. Pressing this key once will turn on the backlights, pressing it again will turn off the backlights.
-  **FN + COLOR CHANGE SYMBOL** - Changes backlight colors.

TROUBLESHOOTING

If your device doesn't respond to Flex keyboard, there may be a simple explanation such as a dead battery or unsuccessful pairing. Please use the following to help troubleshoot your situation. If none of the following solve your issue, please contact ZAGG Customer Service and one of our trained professionals will be happy to assist you.

1. Restart your device.
2. Turn your Flex keyboard off and back on.
3. Forget and re-pair your Flex keyboard.
4. If your Flex keyboard does not establish or maintain a Bluetooth® connection, reset the Bluetooth® module by charging your keyboard.
5. If, after charging, your keyboard doesn't operate correctly, please contact ZAGG Customer Service.

For more help please visit: www.zagg.com/support

For unparalleled scratch protection for your device, we recommend ZAGG's InvisibleShield®.

©2005 - 2018 ZAGG Inc All Rights Reserved.

Patents: zagg.com/patents | NASDAQ: ZAGG | MADE IN CHINA

Bluetooth® is a trademark of Bluetooth SIG, Inc.

ZAGG, InvisibleShield, ZAGG logo, and Flex are trademarks of ZAGG IP Holdings Co., Inc.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocated the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation



Please read the precautions and operation information before using your keyboard or any accessories that accompany it. Retain this information for future use.

1. Health Warning: Take frequent breaks when using your keyboard. If you experience any discomfort, pain, tingling, numbness or burning in your neck, shoulders, arms, wrists, hands or any other part of the body, stop using your keyboard and consult a physician.
2. Use only micro USB chargers in connection with your keyboard.
3. Do not attempt to service your keyboard.
4. Do not disassemble or attempt to disassemble your keyboard.
5. Do not crush or puncture the keyboard.
6. Do not immerse your keyboard in water.
7. Do not put your keyboard in contact with water or other liquids as they could cause a short circuit, fire, or electric shock which could result in serious injury, death or property damage.
8. Do not use liquid or aerosol cleaners or solvents on or near your keyboard. Clean only with a soft, dry cloth. Disconnect any cords before cleaning the keyboard.
9. Do not use your keyboard while operating a motorized vehicle, including automobile, boat or airplane. Doing so could put you and others at risk of serious injury, death or property damage.
10. Do not use or place your keyboard near any heat sources including, but not limited to, radiators, heat registers, stoves, other appliances, campfires or barbecue grills.
11. To reduce the risk of fire or electric shock, wire or connect your keyboard to products only in the manner instructed in the documentation supplied herewith.
12. Do not attempt to modify or adjust any ports. Any improper connections or adjustments may cause damage.
13. When you are ready to discard your keyboard, recycle your keyboard in a manner consistent with electronic recycling requirements or recommendations in your geographic area.